


TRANSLUX D 150

AQUA PRESTIGE

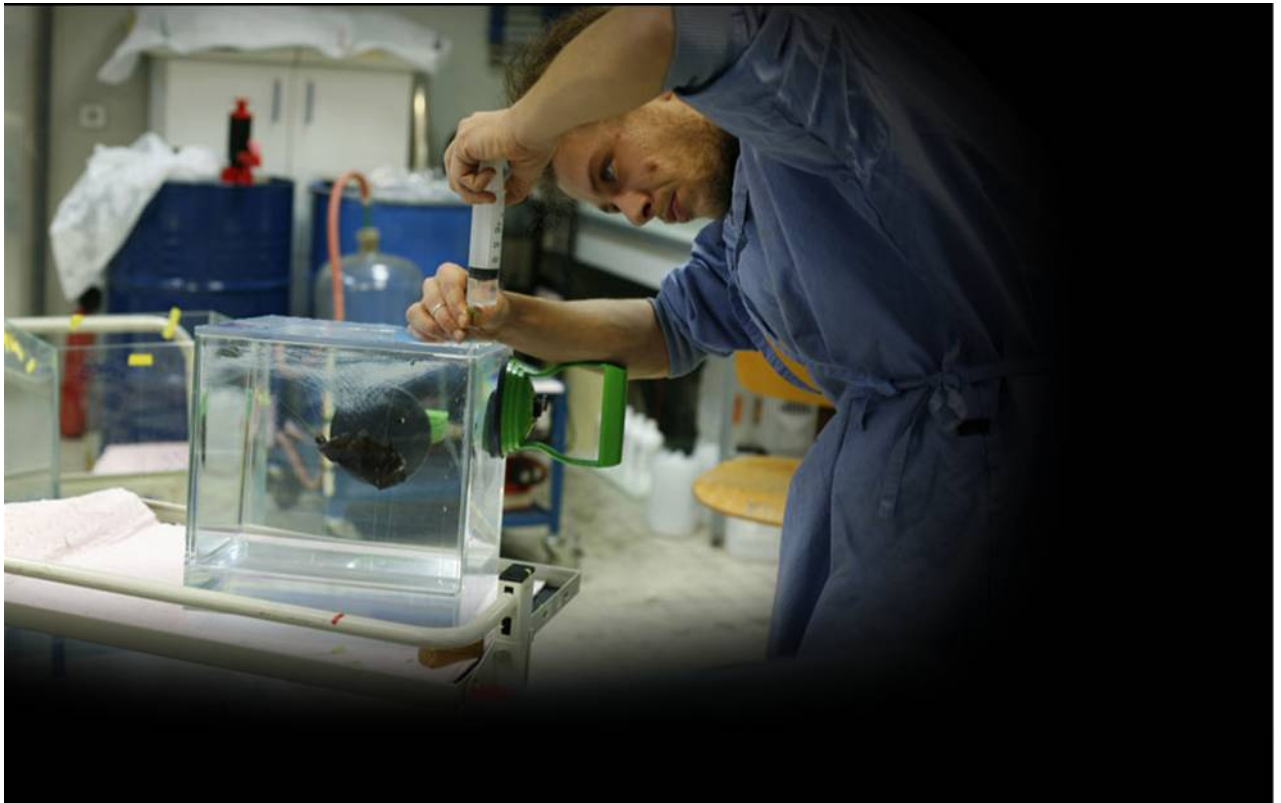

- ✓ **Crystal Clear resin**
- ✓ **Simple to hand cast**
- ✓ **Good UV stability**
- ✓ **Easy pigmentation**
- ✓ **Perfect matching of other pigmented liquids like wine, coffee etc...**

TRANSLUX D 150 **Transparent Resin**

Crystal Clear Resin, ideal for Water simulation

Product developed to produce transparent decorative items in transparent containers.

No specific equipment required for the resin processing.

PROPERTIES

- ✦ Good UV stability
- ✦ Stable optical properties after hardening
- ✦ No stress applied on glass containers with change of temperature.
- ✦ Compatibility for inclusion of all types of materials
- ✦ Self degassing
- ✦ Possible to cast up to 2 litres in one operation
- ✦ Final hardness: 80 A SHORE
- ✦ Mixing ratio: 100/100 by volume
- ✦ Low viscosity : 250 mPa.s
- ✦ No yellowing during hardening stage due to the very low exothermic reaction
 - ✦ Stable during storage, no crystallisation.
 - ✦ Stable after complete hardening.
 - ✦ Product adheres to the walls of the container.



For further information and technical data sheets go to www.axson.com

TRANSLUX D 150 **Transparent Resin**

General observations before casting:

✦ Resin compatibility with almost all materials, with containers like : standard glass, cristal, pyrex, clear PVC / polycarbonate, PMMA, as well as contents (items will be included) ; vegetable items, minerals, ceramic, metal.

✦ User friendly for hand mixing and casting.

✦ Very long pot life of 6 hours for 10 Kg mixes allows customers to prepare in advance a large volume of resin, especially for successive castings of small parts.

✦ To be able to make modifications during resin process.

✦ Be sure of self degassing of the mixed resin.



Casting observations:

✦ This low viscosity resin results in a perfect impregnation, fills all the gaps during casting of the container. Complete and homogeneous filling without any porosity.

✦ Low and progressive curing process to reduce the stress.

✦ Allows an object to be placed in the middle of the resin without any contact with the walls, with a successive casting to totally encapsulate object.

✦ The high quality of transparency of TRANSLUX D150 allows casting in a few layers, it's almost impossible to see the different layers after hardening.

TRANSLUX D 150

Observations after hardening:

After hardening the resin adheres perfectly to the walls of the container and promotes a homogenous liquid like aspect .

Any possible bubbles, created from contact with some materials accentuate illusion of fresh flowers immersed in water.




Special effects :

To achieve other liquid aspects, like beverages (wine, tea coffee) it's possible to colour the D150 with liquid mineral colorants.

Process:(part1)

- ✦ Determine the exact volume of the container information into which the resin will be cast.
- ✦ Measure the resin and the hardener volume (1/2 of the total volume for each component).
- ✦ Use preferably clear polyethylene containers with a scale in cm³.
- ✦ Mix carefully with a large plastic spatula . Avoid using electric mixers which creates too many bubbles.
- ✦ Leave the mix to stand until bubbles disappear.

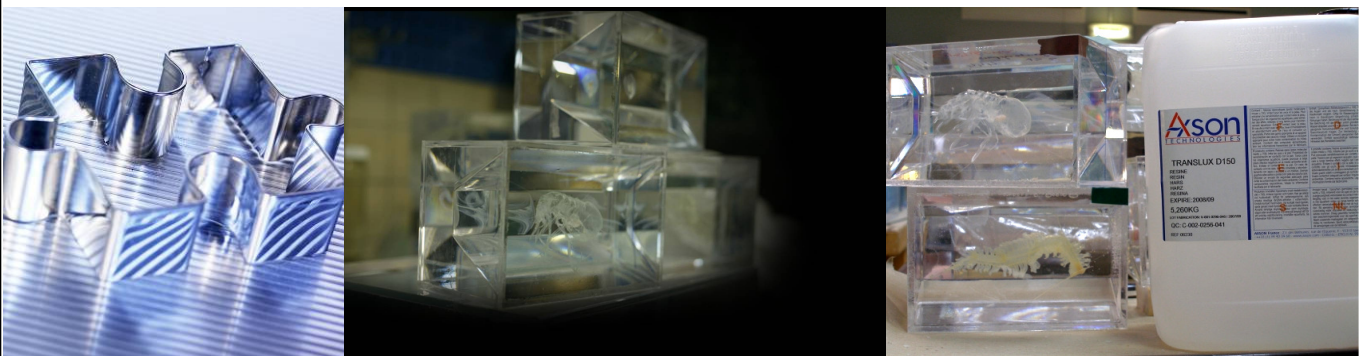

For further information and technical data sheets go to www.axson.com

TRANSLUX D 150

Process: (part 2)

- ✦ Either pour directly the resin in the container and place after the decorative items.
- ✦ Or you place first one part of the decorative elements to the bottom of the container (gravels, coloured granules, decorative stones, etc...)
- ✦ Pour the resin slowly to ensure a perfect filling, then arrange the rest of the decoration (artificial flowers, vegetables, etc...).



- ✦ Do not handle during curing stage (wait for 48h), because you take the risk of creating waves on the resin surface.
- ✦ After 72h, the filled container is ready to be packed or ready to place in situation .

Advice:

- ✦ An excessive level of moisture could disrupt hardening, prior to casting, cover fresh vegetables with a varnish.
- ✦ Regarding some natural materials, any with a thin powdery surface could generate a translucent aspect.
- ✦ In case of doubt, always test trial.
- ✦ Contamination effects come at the end of curing, so it's necessary to wait for at least 48 h before analysing for compatibility.
- ✦ Never expose directly to high power light, or close to a heater. Minute yellowing is expected during ageing and corresponds to the normal characteristics of this type of resin .

For further information and technical data sheets go to www.axson.com

TRANSLUX D 150

★ **Tips :**

- ✦ Resin density is a little bit higher than the density of water, due to this property a low density object could float on the surface .
- ✦ It 's possible to use superglue or removable spray adhesive to block all elements together in the container before casting TRANSLUX D150,
- ✦ In case of casting level with the edge of a container, it is better to add a second level after the main casting has cured.
- ✦ In this way you get a flat surface similar to a liquid surface. This surface casting should be done with a different mixing ratio (100/75) to ensure an harder surface insensitive to dust and environmental pollution.



How to clean the resin surface to remove dust and finger prints :

- ✦ Use only water and soap, clean with a sponge, rinse and dry with a soft rag.
- ✦ Never use alcohol, liquid glass cleaner or solvents (acetone) to avoid the risk of losing optical quality of the surface.

For further information and technical data sheets go to www.axson.com

TRANSLUX D 150

Allow your imagination to run free
TRANSLUX D150...



For further information and technical data sheets go to www.axson.com

AXSON IN THE WORLD

6 PRODUCTION SITES

China
France
Japan
Mexico
Slovakia
USA



- AXSON OFFICES
- ⓐ AXSON OFFICES WITH PRODUCTION SITE & RESEARCH CENTER
- DISTRIBUTORS

12 COMPANIES

Axson France
Tel. +33 1 34 40 34 60
axson@axson.fr
axson.fr

Axson Slovakia
Tel. +42 1 76 42 25 26
office@axson-co.sk
axson-co.sk

Axson Spain
Tel. +34 9 32 25 16 20
axson@axson.es
axson.es

Axson Italy
Tel. +39 02 96 70 23 36
axson@axson.it
axson.it

Axson Germany
Tel. +49 6 07 44 07 11-0
verkauf@axson.de
axson.de

Axson UK
Tel. +44 16 38 66 00 62
sales@axson.co.uk
axson.com

Axson Japan
Tel. +81 5 64 26 25 91
sales@axson.jp
axson.jp

Axson China
Tel. +86 21 58 68 30 37
china@axson.cn
axson.com.cn

Axson Middle East
Tel. +97 1 43 35 32 81
info-middleeast@axson.com
axson.com

Axson India
Tel. +91 20 25 51 07 10/11
info.india@axson.com
axson.com

Axson North America
Tel. +1 5 1 76 63 81 91
info@axson-na.com
axson-na.com

Axson Mexico
Tel. +52 55 52 64 49 22
axson@prodigy.net.mx
axson.com.mx

China
France
Germany
India
Italy
Japan
Mexico
Spain
Slovakia
U. A. E.
UK
USA

